


Pre Filter & eSoft PRO 20L By EPS

- 1. Pressure Reducing Valve
- 2. Raw water sample point / Inlet pressure
- 3. Bypass
- 4. Backwash water pipe minimum ¾"

- 5. Drain with air gap
- Treated water sample point / Outlet pressure
- Recommended extra bypass assembly for servicing

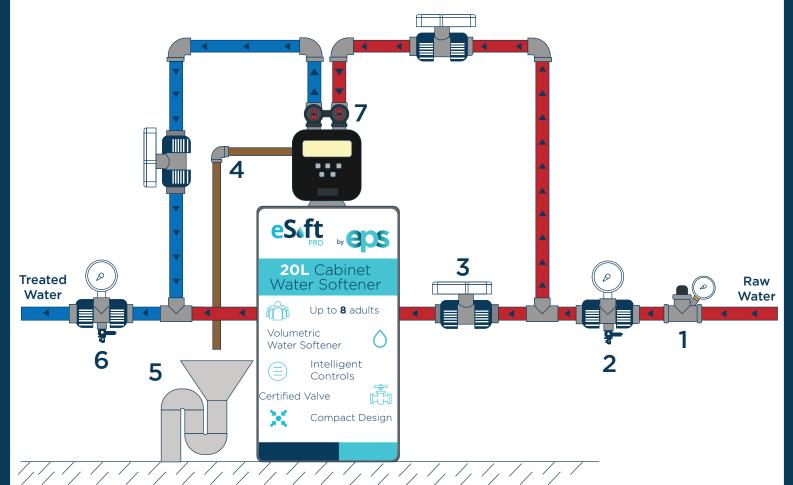

Assembly:

Installation: