


Pre Filter & eSoft ECO 5L

By EPS

1. Pressure Reducing Valve
2. Raw water sample point / Inlet pressure
3. Bypass
4. Backwash water pipe minimum 3/4"
5. Drain with air gap
6. Treated water sample point / Outlet pressure
7. **Recommended** extra bypass assembly for servicing

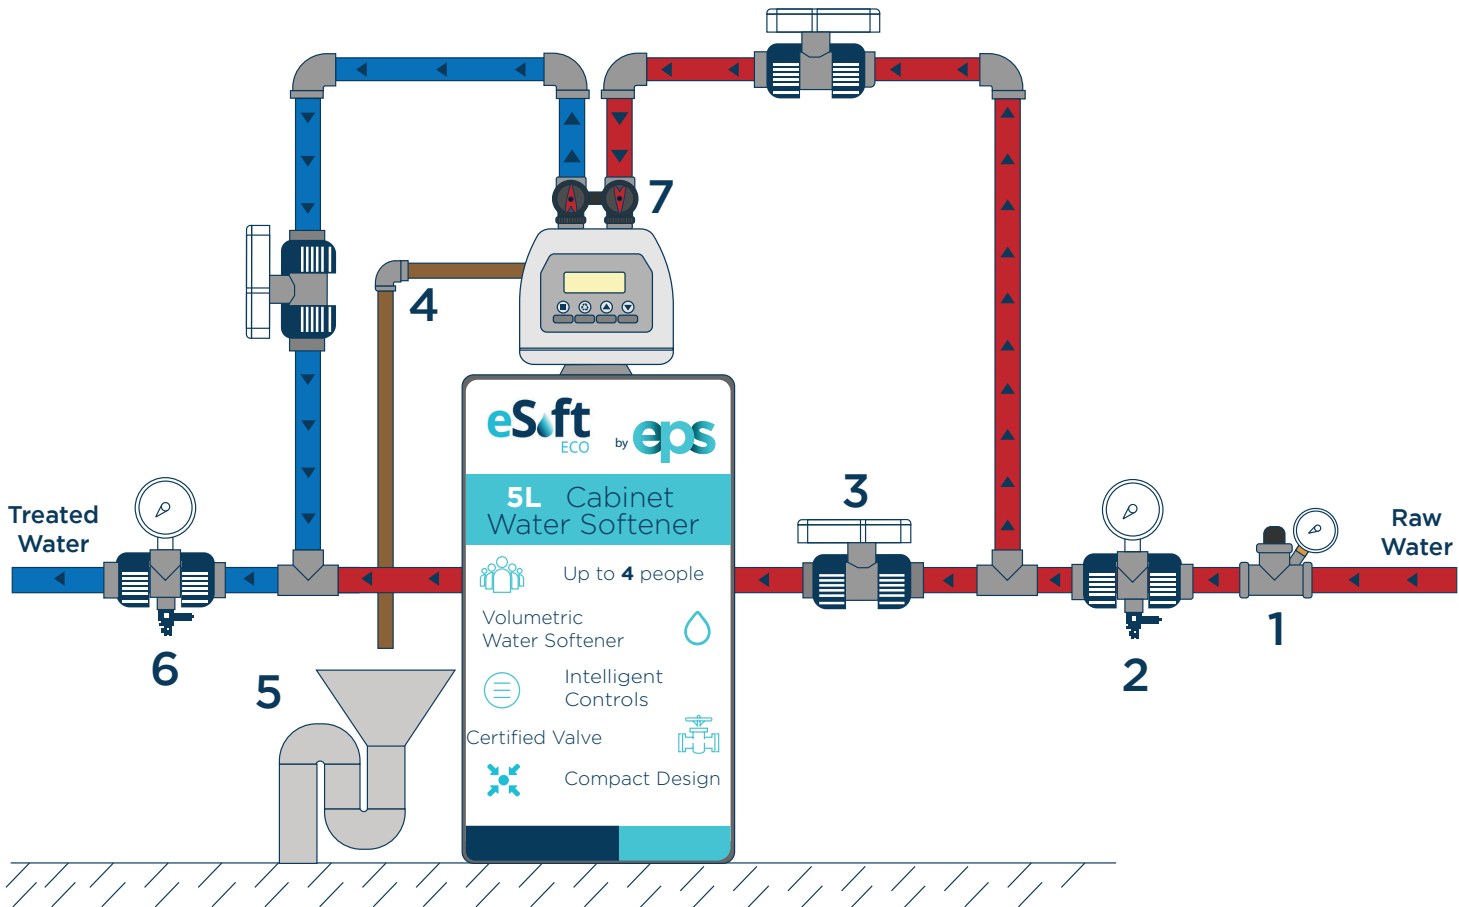

Assembly:

Installation:

24